YEALINK T48-U BASIC GUIDE

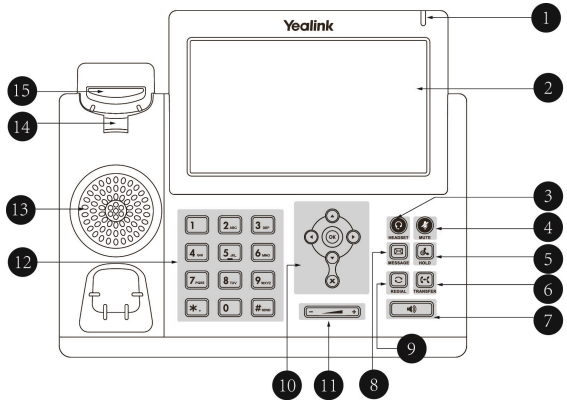



Screen icons

- Messages
- Headset Mode ON
- Telephone Mode ON
- Mute Mode ON
- Free Hand ON
- Mute ON
- Divert always ON.
- Wired network unusable.
- Network cable disconnected.
- Do not disturb activated DND

Device keys

1. Power Indicator LED for the status of the phone, messages and the phone system.
   - Fast flashing: Incoming call.
   - Slow flashing: voice or text message.
2. Touch Screen:Show information about calls, messages, soft keys, time, etc.
3. Headset Key: Toggles and indicates de headset mode.
4. Mute Key: Toggles and indicates Mute mode.
5. Hold Key: Place a call on hold or resumes a held call.
6. Transfer Key: Transfer a call to another party.
7. Speakerphone: Toggles the speakerphone (hands-free) mode or not.
8. Message Key: Accesses voice messages.
9. Redial Key: Redials a previously dialed number.
10. Navigation keys: Scroll through information or options on the screen
11. Volume key. Its functionality depends on the situation: If the telephone is hung up, it modifies the volume of the ringing tone, if the headset is off-hook, the volume of the headset and if the headset is on-hook, the volume of the headset.
12. Keypad key: Provides the digits, letters and special characters.
13. Speakers: Provides ringer and speakerphone audio output.
14. Hookswitch Tab: Secures the handset cradle in vertical position.
15. Hookswitch: Secures the handset in the handset mounted vertically.

Main functionalities

Call Transfer

Blind transfer: Transfer a call without confirmation..

TRANSFER → {Number} → TRANSFER

Unattended: Transfer a call to a third party by consulting availability.

TRANSFER → [número] → OK → Speak → TRANSFER

Call Pickup

When a device is ringing we can answer a call from any other device with *8.

Conference

You can initiate a three-way (including yourself) conference calls with your contacts on the phone.

Option ↕ Conference + OK + num + OK + Talk + Conference